

3/2 way directional valve type 3/2URER6

WK 421 550

NS 6

up to 35 MPa up to 50 dm³/min

11.2012

DATA SHEET - SERVICE MANUAL

APPLICATION

Mobile 3 way 2 position directional valves 3/2 URER6... intended for hydraulic systems where a connection of one of the ports is carried out as an alternative to the two others. The valves are used for in-line mounting in any position.




DESCRIPTION OF OPERATION


A directional valve 3/2URER6... consists of a housing (1), spool (2), solenoid (3) and return spring (4). Connection of P port with one of two ports (C1 or C2) is obtained by realizing a suitable spool (2) position. The spool (2) is shifted to working position by means of the solenoid (3). The return spring (4) pushes back the spool (2) and holds it in start position.


At version 3/2URER6...Y... port Y is to be connected to tank.


In version 3/2URER6.../...**OF.**.. (without springs, with detent) the spool (2) is positioned and hold by means of the detent (5). Its shift results from energizing of one of the solenoids.

In version 3/2URER6.../O... (without spring, without detent) the spool is positioned and hold by the energized solenoid.

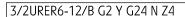

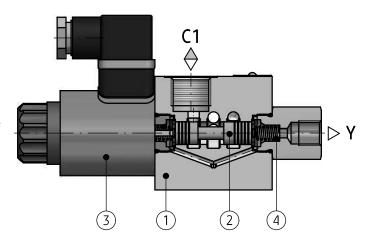

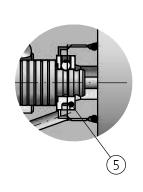

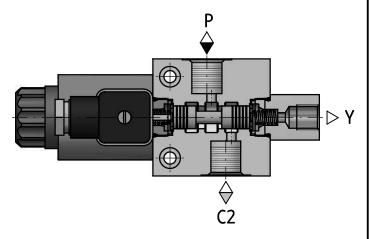

TECHNICAL DATA

Hydraulic fluid	mineral oil		
Required filtration	16 μm		
Recommended filtration	10 μm		
Nominal fluid viscosity	37 mm ² /s in temperature 55 ℃		
Viscosity range	2,8 do 328 mm ² /s		
Fluid temperature range (in tank)	recommended	40°C to 55 ℃	
	maximum	-20°C to +70 ℃	
Ambient temperature range	- 20 °C to +50 °C		
Max operating pressure	with drain port Y connected to tank		35 MPa
(in port P1, P2, A, B, C, D)	without drain port (port Y plugged)		21 MPa
Max pressure in port Y	21 MPa		
Max switching frequency	15000 on/h		
Weight of one section	with 1 solenoid or hand lever operated		max 2 kg
	with 2 solenoids		max 2,5 kg
Nominal supply voltage for solenoids	DC	12V , 24V	
Supply voltage tolerance	±10%		
Power requirtement	30 W		
Insulation	IP 65		
Solenoid coil temperature	max 150°C		


ASSEMBLY AND APPLICATION REQUIREMENTS

- Only valve working properly and suitably installed may be connected to an electric system. Only skilled workers are allowed to connect and disconnect electric system.
- 2. It is forbidden to apply directional spool valve if the supply cable in the gland of plug-in-connector is not properly tightened.
- 3. It is forbidden to apply directional spool valve if the plug-in-connector is not properly tightened to the solenoid socket and is not secured by screwing bolt tightly.
- 4. Due to heating solenoid coils, directional spool valves should be placed in order to eliminate the possibility of incidental touch while using, or, they should be equipped with the coil covers (in accordance with the European standards PN EN ISO 13732-1 and PN EN 982).


SCHEMES

Hydraulic schemes of directional valves 3/2URER6-12/...


section 3/2URER6-12/...Y...

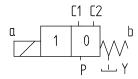


section 3/2URER6-12/...O...

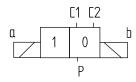

section 3/2URER6-12/...

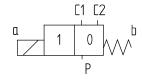


section 3/2URER6-12/...OF...

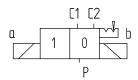


Hydraulic schemes for spools

working and intermediate positions

scheme "A"

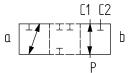


scheme"B"

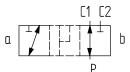


working positions






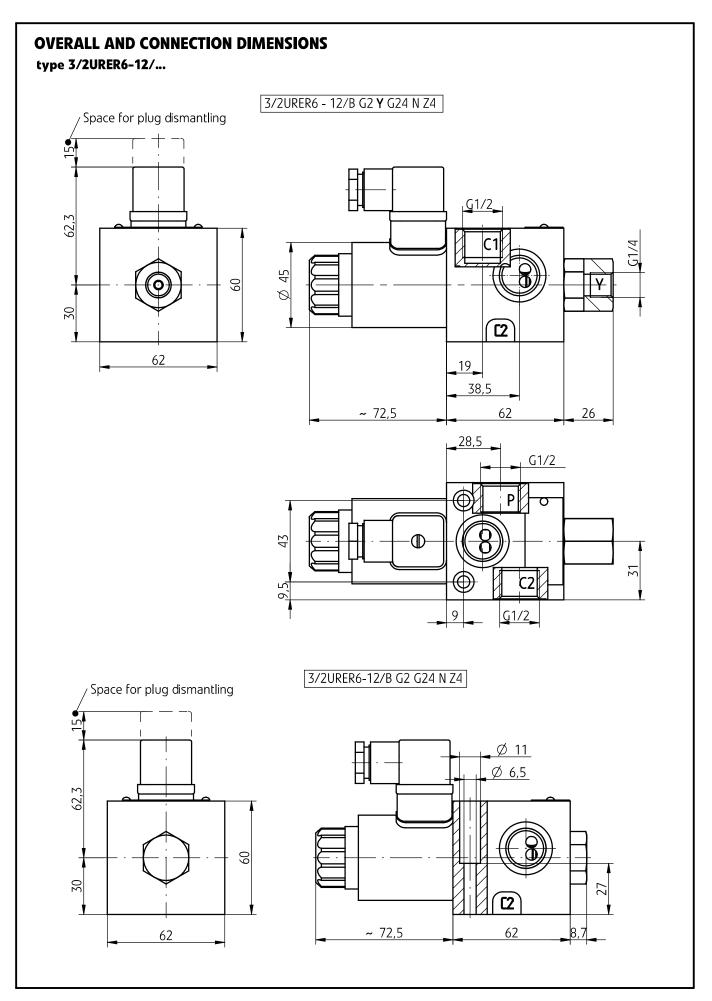

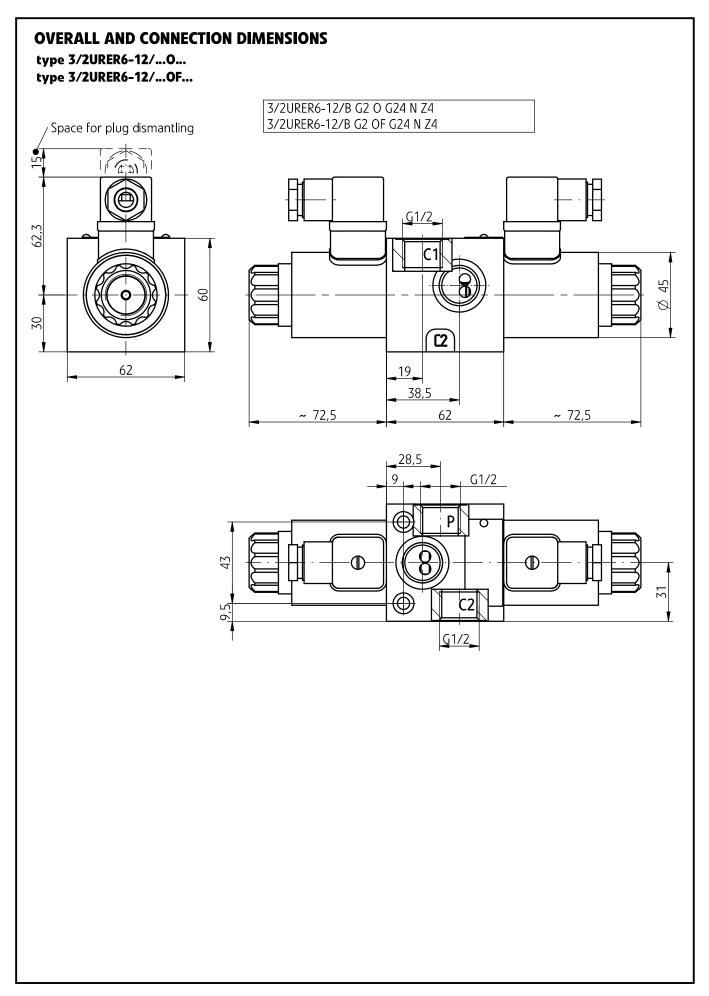

PERFORMANCE CURVES measured at viscosity: $v = 41 \text{ mm}^2/\text{s}$ and temperature $t = 50^{\circ}\text{C}$) Performance curves Δp (Q) for directional valves <u>type</u> <u>3/2URER6...</u> flow resistance performance 1,2 1 0,8 0,6 0,4 0,2 0 10 20 30 40 50 60 Q [dm³/min] operating limit 3/2URER6-12/A 35 flow directions: 30 $P \rightarrow C1$, 25 $P \rightarrow C2$ 20 15 10 5 0 40 10 20 30 50 60 Q $[dm^3/min]$ operating limit 3/2URER6-12/B 35 30 flow directions: $C1 \rightarrow P$, 25 $C2 \rightarrow P$ 20 15 10 5 0 40 10 20 30 50 60 Q [dm³/min]

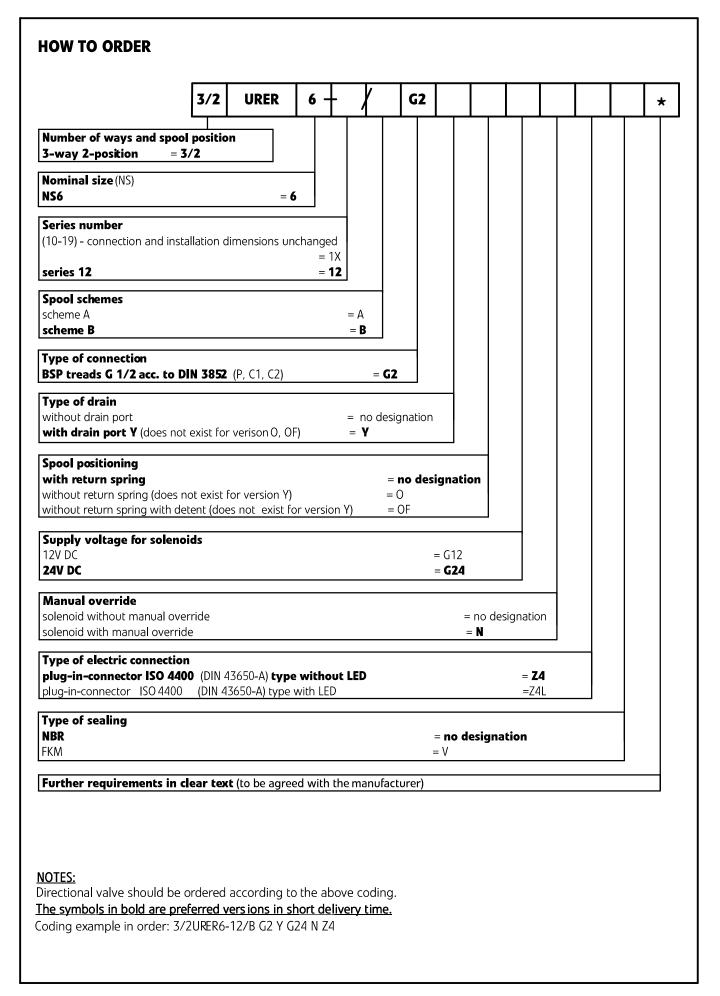

PONAR Wadowice S.A. ul. Wojska Polskiego 29 34-100 Wadowice tel. +48 33 488 21 00 fax.+48 33 488 21 03 www.ponar-wadowice.pl	PONAR® wadowice